


# PV300G Start Guide

## Opening & Closing the Display

To open the display, press your left thumb on the lower-left corner of the display and gently push up in a clockwise direction.

Alternatively, use your right index finger to push down gently on the upper-right corner of the display. The screen will spring into the open position. The normal operating position of the device is horizontal, with the trackball on the right.


To close the display, reverse the motion to pivot the display counterclockwise and snap it into the closed position.

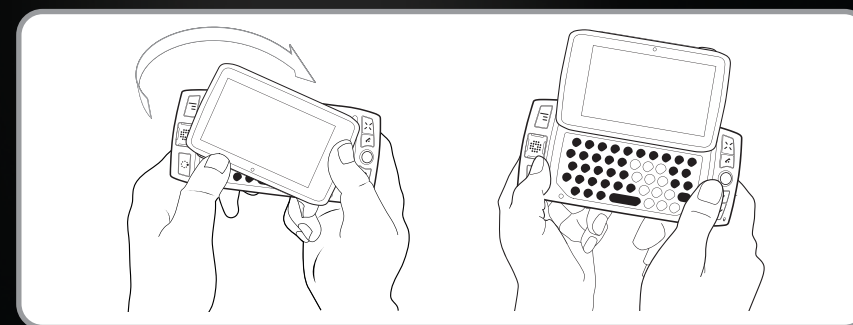

## 1 Insert SIM & Memory Cards


### 1 Remove the back cover

- Press and hold the power button to power down your PV300.
- Press the raised dotted lines on the cover with your left thumb.
- Slide the cover to the right to release. Lift to remove.

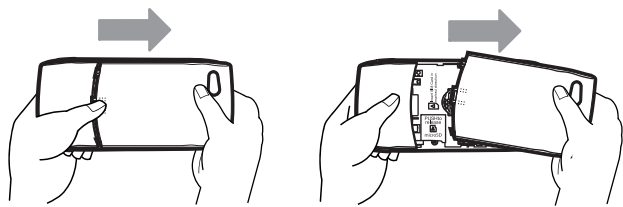


### 2 Insert your SIM card

- Hold card with gold contacts facing down.
- Slide card into slot.

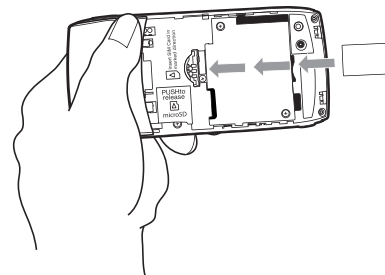


### 3 Insert the memory card

- Hold card with gold contacts facing down and card notch facing to the right.
- Slide card into slot and push to lock in place.

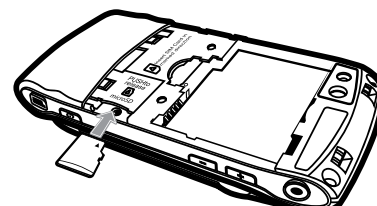


## 2 Insert Battery

### 1 Insert the battery with the notched edge first (a) and then push it (b)

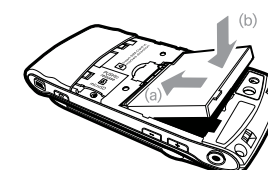


### 2 Replace the back cover

- Align the back cover with the body of the device and slide it into place.

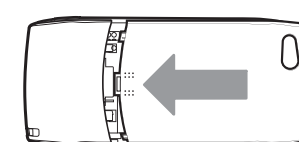

### 3 Charge your device

- Insert the battery charger into the USB port. Make sure the icon is on the top of the plug.

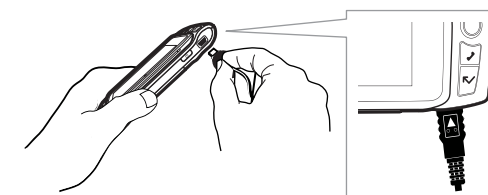

### Left Device Controls

- MENU button**  
Press to open a list of actions you can take on the current screen.
- D-Pad button**  
Press up, down, left, or right to scroll or navigate.
- JUMP button**  
Press to go directly to the Jump screen, your starting point for launching all the device applications.
- LEFT SHOULDER button**  
Press to open Multimedia Messaging screen.

### Right Device Controls

- TRACKBALL**  
Press to select items on the screen. Roll the trackball to navigate the screen.
- SEND/END CALL buttons**  
When the buttons are lit, use them to send or end a call. When unlit, press these buttons to page up or down.
- DONE button**  
Press to go back through screens you were previously viewing. On a screen or in a dialog box, press to save changes. Press and hold to enter power-saving keypad mode.
- CANCEL button**  
Press to dismiss any changes you have made to a screen or dialog box.
- RIGHT SHOULDER button**  
Press to enter Camera Mode.

## Web Browser

1. Press **JUMP** to go to the Jump screen. Scroll to highlight **Browser** then press the trackball. For first time use, you will need to read the Quick Tips for browsing and read and agree to the End User License Agreement. Highlight **Accept** and press the trackball.
2. The Opera Mini™ browser will open with 9 Speed Dial boxes. Click on the address bar (showing www.). Start typing the address of the Web page you wish to visit in the address toolbar. Possible URL matches, and the option to search for the text you type, appear in the drop-down menu.
3. To go to a Web page, you can either finish typing the complete URL then press Return; or, roll the trackball to highlight a suggested URL in the drop-down menu, then press the trackball.

## Keyboard Shortcuts

A list of helpful keyboard shortcuts is available in the User Guide.

## Applications

- IM
- Phone
- Planning
- Address Book
- Camera
- Media Player
- Browser
- Calculator

## Using the Applications

### Phone

#### MAKE A CALL

Press **JUMP** , type a name or number and then press **SEND** .

#### ANSWER A CALL

Press **SEND** .

#### END A CALL

Press **END** .

#### SETTING UP VOICE MAIL

Press and hold the number 1 key. Follow the prompts.

#### RETRIEVE MESSAGES

Press and hold the number 1 key.

### Text Messaging

You have a new text message when you see this icon in the title bar.

#### READ A MESSAGE

- 1 Press **JUMP** and select **Phone Messaging**.
- 2 Roll the trackball and select **Text Messaging**.
- 3 If the Inbox is closed, open it by rolling the trackball to the right.
- 4 To read a message, highlight the message then press the trackball to open it.

#### COMPOSE A MESSAGE

- 1 Press **MENU** + **N** to open a new compose screen.
- 2 Complete the To field, then add your text, smileys , or prewritten messages .
- 3 Press **MENU** + **M** to send.

## Take a Photo or Record Video

- 1 Press the **RIGHT SHOULDER BUTTON** to open the capture screen.
- 2 Select to switch between Photo mode and Video mode. The current mode will display in the upper-right of the screen.
- 3 In Photo mode, press the **RIGHT SHOULDER BUTTON** to take the photo, then press **DONE** to save it.
- 4 In Video mode, press the **RIGHT SHOULDER BUTTON** to start recording video. Press to pause or to stop recording. Your video will be saved to your chosen album.

## Multimedia Messaging

You have a new picture message when you see this icon in the title bar.

#### READ A MESSAGE

Follow the instructions in "Text Messaging," except in step 2, select **Multimedia Messaging**.

#### COMPOSE A MESSAGE

Each message can contain up to 5 multimedia slides, containing text, audio and video.

- 1 Press **MENU** + **N** to open the compose screen.
- 2 Complete the To, Subject and then add your text. To add a photo or video, select to capture a new photo or video or choose from your Albums. Press **DONE** to attach it to your message.
- 3 To add a ringtone, select and choose a ringtone.
- 4 To add a voice recording, select then select **Record**. Press the trackball to start and stop recording (up to 60 seconds).
- 5 To add more photos or videos (up to 5 total), select .
- 6 To preview your message, press **MENU** + **D**.
- 7 Press **MENU** + **M** to send.

\* Additional charges may apply to send/receive domestic/international audio postcards, text, picture and video messages.

## 90 Day Limited Warranty

Personal Communications Devices, LLC (the Company) warrants to the original retail purchaser of this handheld portable cellular telephone that should this product or any part thereof during normal consumer usage and conditions, be proven defective in material or workmanship that results in product failure within the first ninety (90) day period from the date of purchase, such defect(s) will be repaired or replaced (with new or rebuilt parts) at the Company's option, without charge for parts or labor directly related to the defect(s). The antenna, keypad, display, rechargeable battery and battery charger, if included, are similarly warranted for ninety (90) days from date of purchase.

This Warranty extends only to consumers who purchase the product in the United States or Canada and it is not transferable or assignable. This Warranty does not apply to:  
(a) Product subjected to abnormal use or conditions, accident, mishandling, neglect, unauthorized alteration, misuse, improper installation or repair or improper storage;  
(b) Product whose mechanical serial number or electronic serial number has been removed, altered or defaced;  
(c) Damage from exposure to moisture, humidity, excessive temperatures or extreme environmental conditions;  
(d) Damage resulting from connection to, or use of any accessory or other product not approved or authorized by the Company;  
(e) Defects in appearance, cosmetic, decorative or structural items such as framing and non-operative parts;  
(f) Product damaged from external causes such as fire, flooding, dirt, sand, weather conditions, battery leakage, blown fuse, theft or improper usage of any electrical source.

The Company disclaims liability for removal or reinstallation of the product, for geographic coverage, for inadequate signal reception by the antenna or for communications range or operation of the cellular system as a whole. When sending your wireless device to Personal Communications Devices, LLC for repair or service, please note that any personal data or software stored on the device may be inadvertently erased or altered. Therefore, we strongly recommend you make a back up copy of all data and software contained on your device before submitting it for repair or service. This includes all contact lists, downloads (i.e., third-party software applications, ringtones, games and graphics) and any other data added to your device. In addition, if your wireless device uses a SIM or Multimedia card, please remove the card before submitting the device and store for later use when your device is returned. Personal Communications Devices, LLC is not responsible for and does not guarantee restoration of any third-party software, personal information or memory data contained in, stored on, or integrated with any wireless device, whether under warranty or not, returned to Personal Communications Devices, LLC for repair or service. To obtain repairs or replacement within the terms of this Warranty, the product should be delivered with proof of Warranty coverage (e.g., dated bill of sale), the consumer's return address, daytime phone number and/or fax number and complete description of the problem, transportation prepaid, to the Company at the address shown below or to the place of purchase for repair or replacement processing. In addition, for reference to an authorized Warranty station in your area, you may telephone in the United States (800) 229-1235, and in Canada (800) 465-9672 (in Ontario call 416-465-9660).

THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY MUST BE BROUGHT WITHIN A PERIOD OF 18 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY SPECIAL CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. THE COMPANY SHALL NOT BE LIABLE FOR THE DELAY IN RENDERING SERVICE UNDER THIS WARRANTY OR LOSS OF USE DURING THE TIME THE PRODUCT IS BEING REPAIRED OR REPLACED.

No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product. Some states or provinces do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitation or exclusions may not apply to you. This Warranty gives you specific legal rights, and you may also have other rights, which vary from state to state or province to province.

IN USA: Personal Communications Devices, LLC  
555 Wireless Blvd.  
Hauppauge, NY 11788  
(800) 229-1235

IN CANADA: PCD Communications Canada, LTD  
5555 Eglinton Avenue West • Suite# 234  
Toronto, ON M3J 5K5  
(800) 465-9672

Full user guide available only at [www.pcdphones.com](http://www.pcdphones.com) © 2010 Personal Communications Devices LLC. All rights reserved. Features, specifications, and accessories are subject to change without notice. • SDPV300G